


# **USER NOTICE**

## **OCCLUSAL FILM DRYING FOR PERI-PRO PROCESSING**

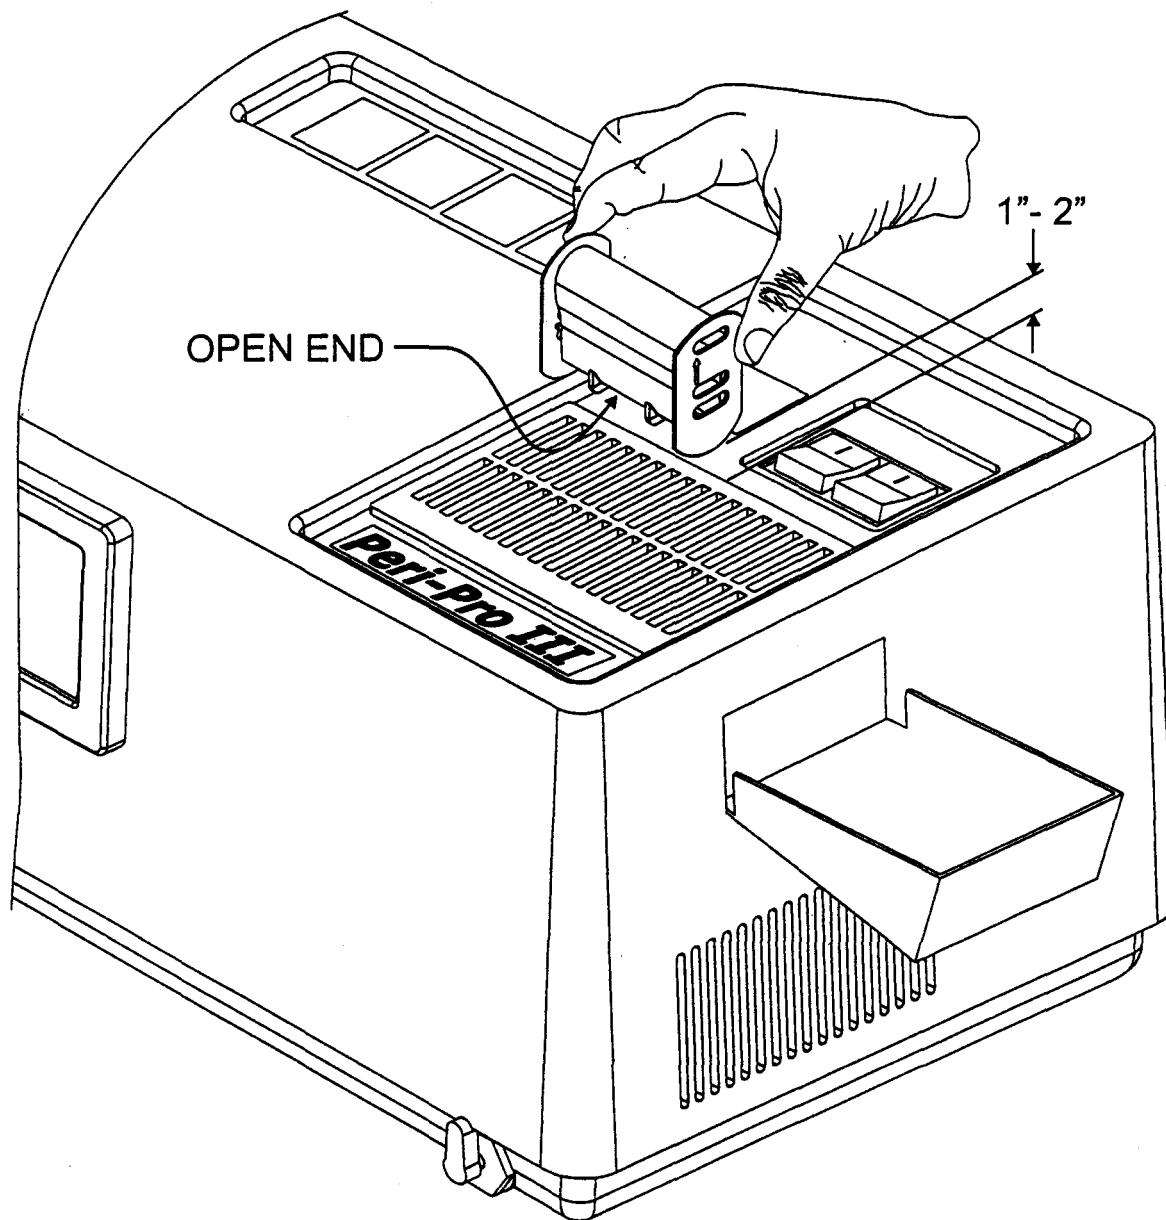

*To assure complete drying of processed # 4 films, a manual assist may be needed, if so;*

1. While the fan is blowing, hold the open end of the film in the carrier directly over the dryer grille, about 1"- 2" elevation is sufficient, and slowly pivot the carrier to have warm air blow on the outer surface.
2. 30-60 seconds should be enough time to adequately dry film.
3. Unload the dried film from the carrier when done.